




# BEST

Easels by Richeson

## HOW TO ASSEMBLE Sitha's Taboret #880019

BEST Artist's Materials - A Richeson Co. - Kimberly, WI - Phone: 1-800-233-2404 - [www.richesonart.com](http://www.richesonart.com) 1/16

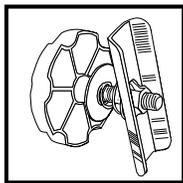


Height & tray adjustments unlock easily, yet lock into place & stay locked because of the **Wedge-lok System**. The metal plate features wedge-cut edges that conform to the wedge-cut sections of the hardwood. When

the knob is tightened, the inward tension pulls the metal plate snugly against the wood for a solid lock.



**Slide Guides** make angle and height adjustments on Best easels smooth. These circular graphite impregnated plastic inserts are used wherever there is a slot in the wood of the easel. This

part allows for smooth movement and protects the hardwood from the metal bolt.

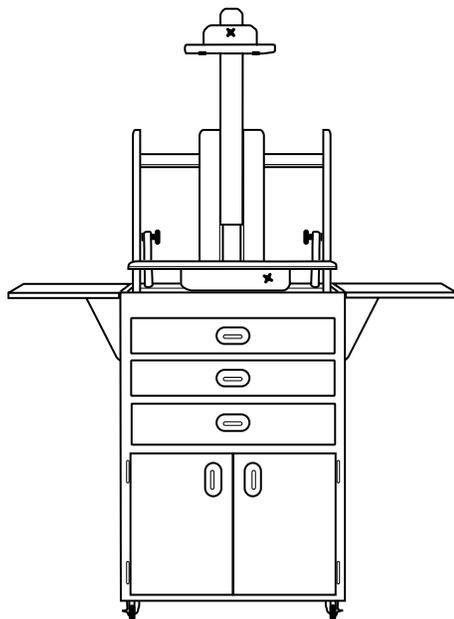

### Taboret Assembly

- 1.) Take Sitha's Taboret out of the box  
(We would recommend assistance if possible).  
**Do not open the top shelves until folding wing supports are attached!**  
The hinged shelves will break off if support wings are not attached first.
- 2.) Locate hardware and folding wing supports (triangular shaped pieces of wood). The wing supports and the side of Sitha's Taboret have already been predrilled and fitted for two screws, so all you need is a Phillips screwdriver to mount the supports. If predrilled holes don't match up at first, switch sides.
- 3.) The bottom of the taboret has predrilled holes for the four casters. Mount these and you will be all set.