



Caitlin Taboret Assembly

- 1.) Take out of the box. (We would recommend assistance if possible). **Do not open the top shelves until folding wing supports are attached!** The hinged shelves may break off if support wings are not attached first.
- 2.) Locate hardware and assembly pieces found in the lower cabinet of the taboret. The small box contains:
 - 2 wing supports (triangular shaped pieces of wood) and 6 screws
 - 4 wooden handles and 8 bolts
 - 4 rubber casters and 16 screws.
- 3.) Attach the wing supports to the side of the taboret. Holes have already been predrilled and fitted for two screws, so all you need is a Phillips screwdriver to mount the supports. If predrilled holes don't match up at first, switch sides.
- 4.) Attach the wooden handles with bolts.
- 5.) The bottom of the taboret has predrilled holes for the four casters. Mount these using 16 screws.
- 6.) Locate the larger box and the bottom painting tray from the lower cabinet. The larger box contains:
 - 2 masts
 - 2 top canvas holders
 - 1 stainless steel brush washer
 - 1 stainless steel canister.
- 7.) Slide masts into place and tighten to position. Slide on bottom painting tray from top to bottom and tighten to position. Repeat for top canvas holders.