


Elegant H-Frame Assembly

- 1.) Find large Easel Frame. Loosen black knobs on Back Support Legs so Base can fold out. Once extended, re-tighten black knobs and stand easel upright.
- 2.) Loosen black knobs on back of Easel Mast Guide. Slide Masts into Guides from top to bottom. Tighten black knobs to position.
- 3.) Locate Winch. Find pre-drilled holes on side of Easel Frame. Secure with 5 wood screws.
- 4.) Remove lug nut from Winch. Attach handle and re-secure lug nut.
- 5.) Slide on Bottom Painting Tray from top to bottom. *Note: You may need to slightly loosen the black knob found inside the Angled Storage Area. If Tray doesn't go on, you may have loosened the knob too much. We recommend assistance with this step.*
- 6.) Slide on the Top Canvas Tray from top to bottom and tighten black knobs to secure.
- 7.) To secure rope to Winch, thread rope through Pulley System (as shown at bottom left), then thread through 2 cylindrical guides (bars) on Winch and insert into 2 holes in pulley plate and knot securely. Hold rope taut and begin to turn crank to tighten rope. When rope is taut, tray will begin to lift.

NOTE: When raising or lowering the canvas holder using the pulley system, you must first loosen the black "Wedge-lok" knob(s) on the bottom painting tray as well as the top canvas holders.

Failure to do so will cause the pulley wheel to break, which in turn will cause the painting tray to fall, causing serious injury to you or your artwork.

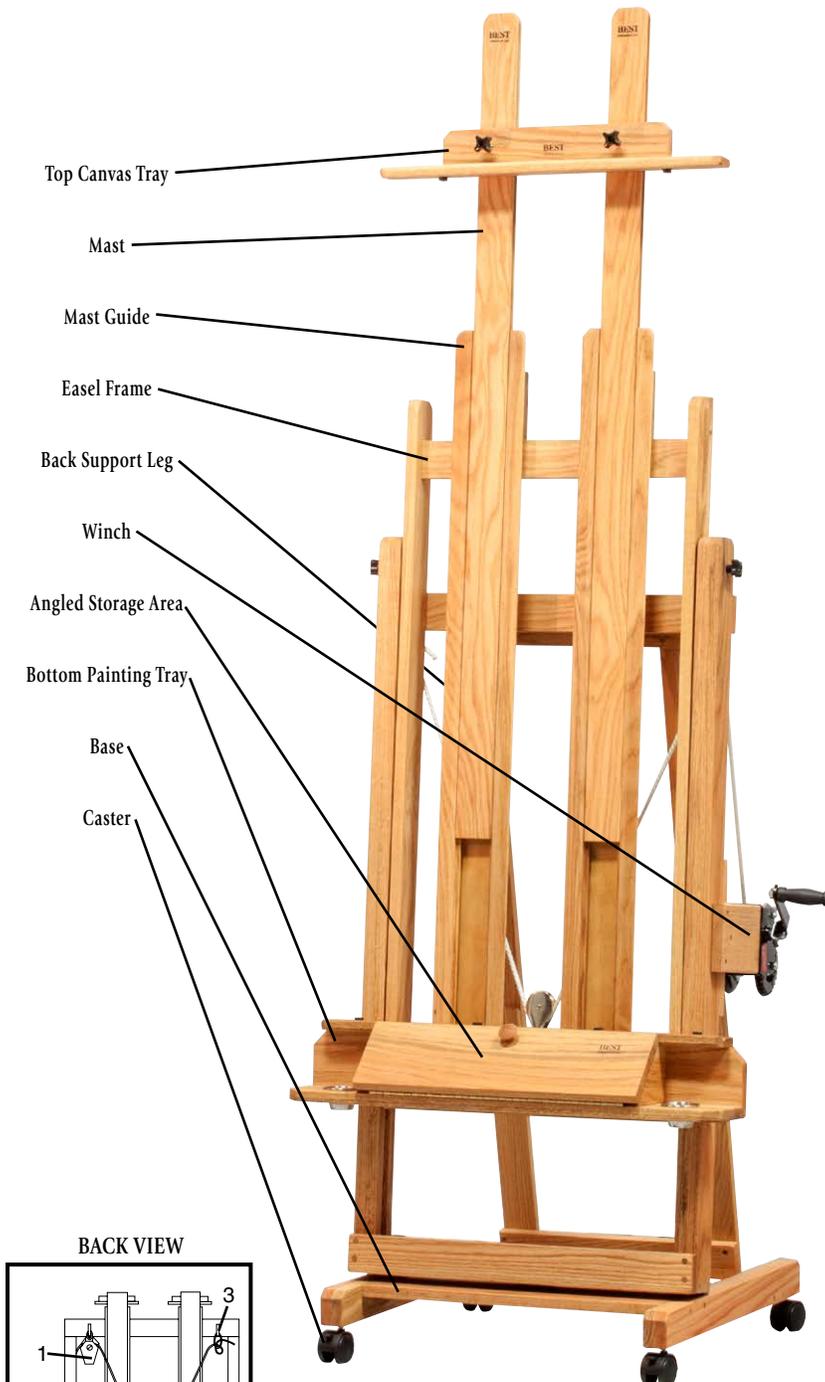

BACK VIEW

Pulley System

Insert rope through Pulley 1, then through Pulley 2. Pull rope up. Thread rope through Hook Screw (3). Wrap back around rope itself several times then knot securely.