 


Height & tray adjustments unlock easily, yet lock into place & stay locked because of the **Wedge-lok System**. The metal plate features wedge-cut edges that conform

to the wedge-cut sections of the hardwood. When the knob is tightened, the inward tension pulls the metal plate snugly against the wood for a solid lock.

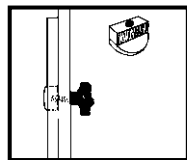 


Slide Guides make angle and height adjustments on Best easels smooth. These circular graphite impregnated plastic inserts are used


wherever there is a slot in the wood of the easel. This part allows for smooth movement and protects the hardwood from the metal bolt.

Angle Adjustment

To change tilt: Loosen the 4 black knobs on inner & outer side of the arms, slide easel into place & tighten knobs.

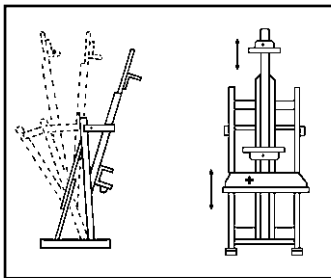

 To change position of the painting trays: Loosen or disassemble the **Wedge-Lok System** slide or place in desired position and reassemble or tighten.

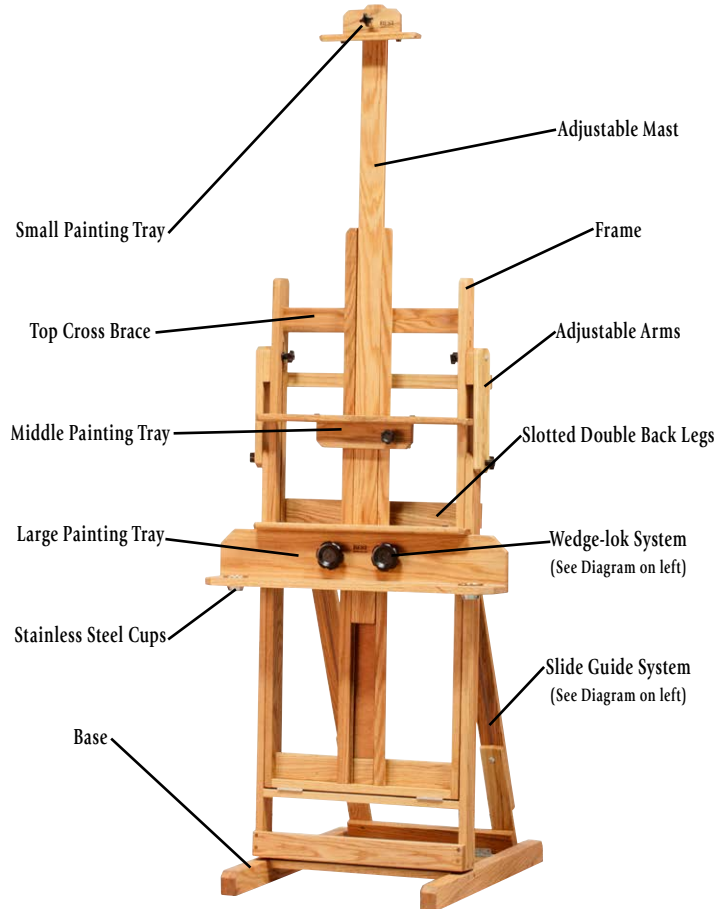

- Red, mid-continent Appalachian oak, hand rubbed & oil-finished for beauty & longevity
- Double laminated quad base for strength
- Deluxe painting tray features level tool shelf & 2 stainless steel cups
- Unique forward tilt feature for pastel artists
- Painting trays feature rubber grips to keep canvas secure

Easel Assembly - University

- 1.) Take components out of the box. Set easel on floor.
- 2.) Loosen **Slide-Guide System** on both back legs, stand H-Frame up to desired angle and tighten **Slide Guide System**.
- 3.) Lastly, attach painting trays by starting with the middle painting tray. Loosen **Wedge-Lok System** and slide down mast. When in the desired position, tighten **Wedge-Lok System**. For the Large Painting Tray, loosen the **Wedge-Lok System**, put tray in desired position and tighten the **Wedge-Lok System**. Finish completing assembly by attaching the top Small Painting Tray in the same manner as the Middle Painting Tray. The angle of your University Easel can be adjusted by loosening the Slide-Guide System on the back legs and the adjustable arms.