



Height & tray adjustments unlock easily, yet lock into place & stay locked because of the **Wedge-lok System**. The metal plate features wedge-cut edges that conform

to the wedge-cut sections of the hardwood. When the knob is tightened, the inward tension pulls the metal plate snugly against the wood for a solid lock.

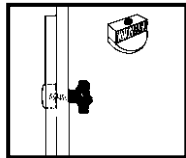

**Slide Guides** make angle and height adjustments on Best easels smooth. These circular graphite impregnated plastic inserts are used


wherever there is a slot in the wood of the easel. This part allows for smooth movement and protects the hardwood from the metal bolt.

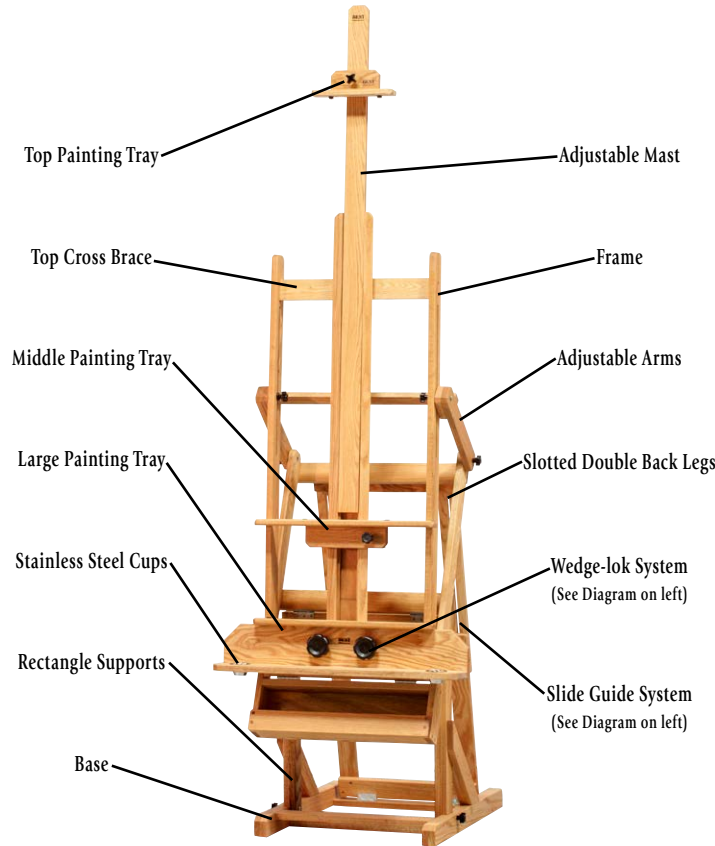


- **Red, mid-continent Appalachian oak, hand rubbed & oil-finished for beauty & longevity**
- **Double laminated quad base & laminated sides for long life & extra strength**
- **Deluxe painting tray features level tool shelf & 2 stainless steel cups**
- **Unique forward tilt feature for pastel artists**
- **Painting trays feature rubber grips to keep canvas secure**
- **Hinges at joints for maximum strength**

### Angle Adjustment

To change tilt: Loosen the 4 black knobs on inner & outer side of the arms: slide easel into place & tighten knobs.

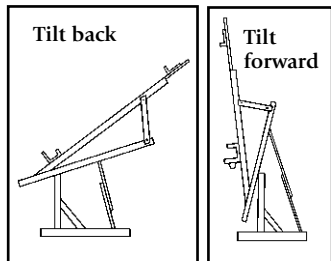

To tilt flat: Loosen the 4 black knobs on inner & outer side of the arms; Place frame flush with extension arm & tighten knobs. Loosen knobs on each back leg & lower easel into flat position, tighten knobs.

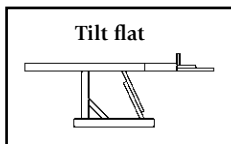

### Easel Assembly - European

- 1.) Set base on floor - open hinged piece and lay flat.
- 2.) Insert large rectangle frame perpendicular to base, into pre-cut areas, with pre-drilled hinge holes facing forward (away from extended legs). Secure by threading 3" carriage bolts through base and frame (from inside to out) and attaching small black plastic knobs and tighten.
- 3.) Take the 2 slotted diagonal pieces of wood and align over pre-drilled holes on base and frame. Pieces will extend down to floor on the inside of base. Secure with 1" screws. Start screws in the pre-drilled holes before aligning.
- 4.) Lay H-Frame (large partially assembled frame) horizontally onto the small rectangle frame using the long-slotted legs as support. The legs will be perpendicular to the floor and will fit inside the base. Make sure hinges are open and in the correct position. Secure hinges by using 6 small screws.
- 5.) Lastly, attach painting trays by starting with the middle painting tray. Loosen **Wedge-Lok System** and slide down the Mast. When in the desired position, tighten **Wedge-Lok system**. For the Large Painting Tray, you will disassemble the **Wedge-Lok System**, put the tray in the position you desire and reassemble the **Wedge-Lok System**. Finish completing assembly by attaching the top Small Painting Tray. The angle of your European Easel can be adjusted by loosening the **Slide-Guide System** on the back legs and adjustable arms.