



BEST
ARTIST'S
PRODUCTS

HOW TO ASSEMBLE THE Wallmount Easel

BEST EASEL #887100





Contents of Box

1 - Wallmount Easel | 1 - Wallmount Easel Frame | 1 - Easel Tray | 1 - Easel Mast | 1 - Parts Package (4 each): 2 1/2" Wood Screws, 3" Bolts, 2" Drywall Toggles



- 1** Easel Frame
- 2** Easel
- 3** Parts Bag Contents
- 4** Easel Mast
- 5** Easel Tray

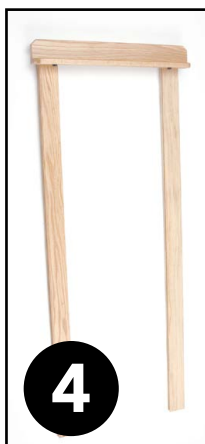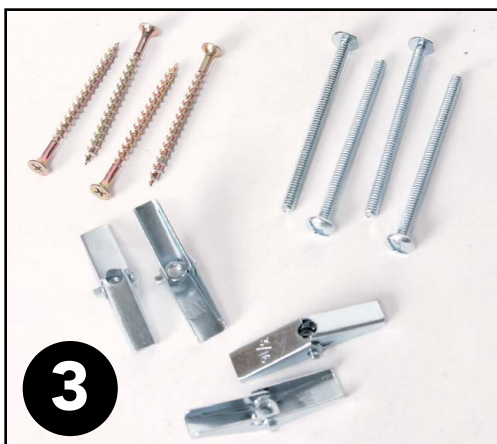



BEST
ARTIST'S
PRODUCTS

HOW TO ASSEMBLE THE Wallmount Easel

BEST EASEL #887100



Assembly

Mounting Easel on wall:

2 people recommended for Assembly/Wall Mounting.

1. Remove Easel from Easel Frame
 - a. Remove bottom two knobs from top of Easel Frame.
 - b. Remove screws from hinges at the bottom of the Easel Frame. (3 from each hinge)

2 options exist for attaching frame to wall.

- Drywall Toggle bolts
Inside (drilled) holes are for toggles.
- Wood Screws
Outside (countersunk) holes are 16" on center for screwing frame directly to studs in wall.

2. Hold frame up on wall and mark where holes will be drilled.
(If screwing to wall, **make sure to mount on studs**)
3. Re-attach the Easel to Easel Frame on wall by first re-connecting hinges with screws removed earlier (3 from each hinge).
4. Re-attach top of Easel Frame with bolts and knobs.
5. Attach bottom canvas holder by sliding from the top until it comes to a rest on the bottom stops.




1a. Remove top knobs



1b. Remove bottom hinges



2. Insert bolts with toggles into holes drilled through wall if not screwing frame directly to studs.

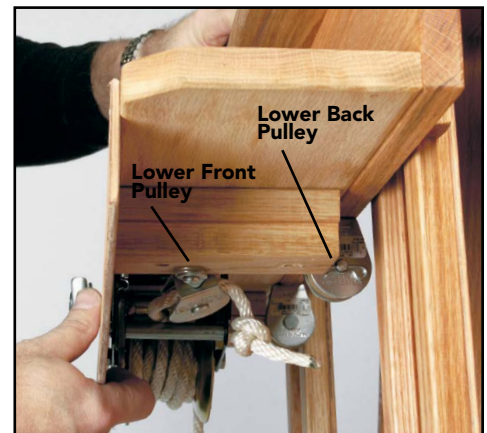

5. Attach Canvas Holder to Easel

Winch Assembly (after mounted on wall)

6. Winch will have two rope ends.
Feed rope along lower back pulleys, attaching **securely** to eye-hooks at top of Easel.
7. Attach pulley handle: remove locking nut, insert handle, put locking nut back on and tighten.
8. Insert Easel Mast through channels at top of Easel. When raising and lowering Easel Tray, use switch to engage ratchet up or down.



7. Assemble Winch after tying ropes off to top of Easel Frame



8. Insert Easel Mast through channels at top of Easel.