




BEST
Easels by Richeson

HOW TO ASSEMBLE THE
Classic Santa Fe II
#880350 (Old Style Pulley System)

BEST ARTIST'S MATERIALS - A RICHESON COMPANY - KIMBERLY, WI - PHONE: 1.800.233.2404 - RICHESONART.COM


4/21

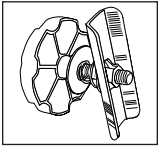

WEDGE-LOK SYSTEM

Height and tray adjustments unlock easily, yet lock into place and stay


locked because of the Wedge-lok System. The metal plate features wedge-cut edges that conform to the wedge-cut sections of the hardwood. When the knob is tightened, the inward tension pulls the metal plate snugly against the wood for a solid lock.

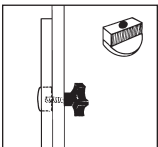


SLIDE GUIDES

Slide Guides make angle and height adjustments on BEST easels

smooth. These circular graphite impregnated plastic inserts are used wherever there is a slot in the wood of the easel. This part allows for smooth movement and protects the hardwood from the metal bolt.

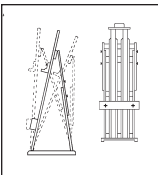


Achieve these angles with the Classic Santa Fe II by using the Slide Guide System explained in diagram above.

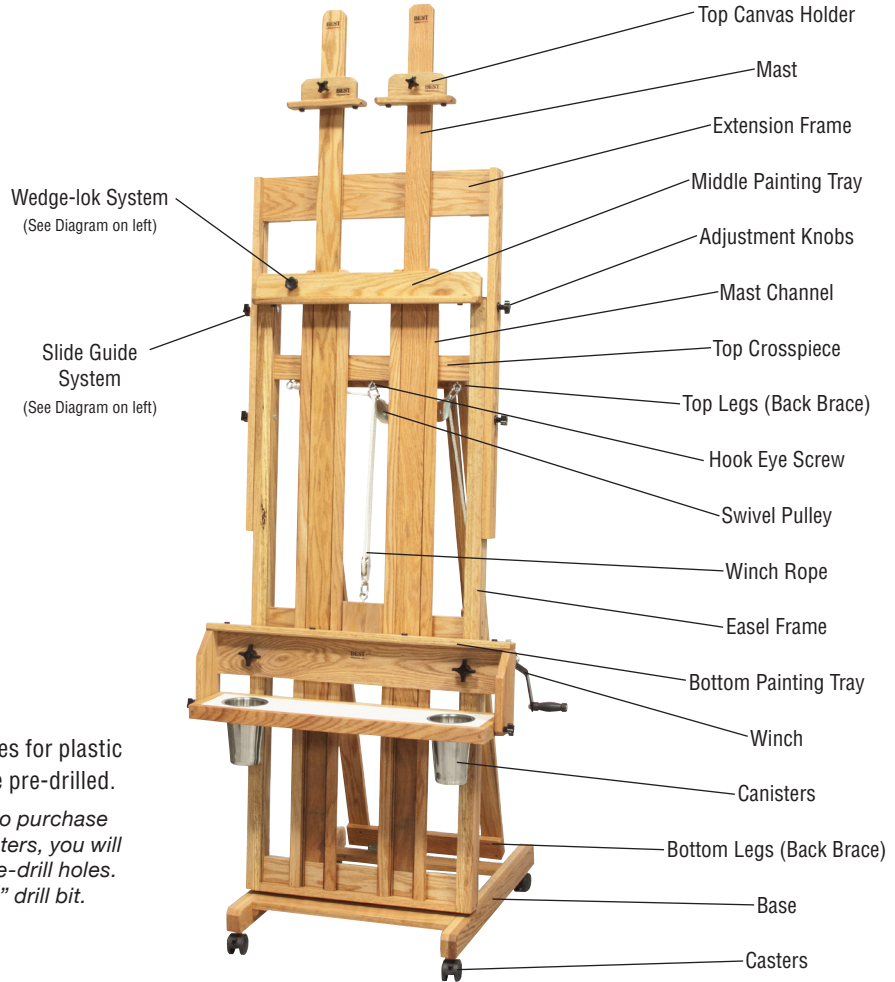

NOTE: Holes for plastic casters are pre-drilled.

If you opt to purchase rubber casters, you will need to pre-drill holes. Use a 3/32" drill bit.

PULLEY SYSTEM

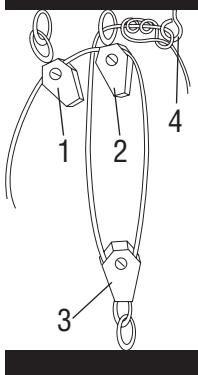

Insert rope through Pulley 1, then through Pulley 2. Pull rope down through Pulley 3, then back up through Pulley 2's hook. Thread rope through Hook Eye Screw (4), wrap rope back around itself several times then knot securely.

EASEL ASSEMBLY

1. Attach Casters (locking casters to the front) to the Base with the included screws. Set the easel Base on the floor with Casters locked. Open up, use the Slide Guide System to get easel to the desired angle and tighten knobs.
2. The Masts are packed loose in the carton. Carefully insert into the Mast Channels and slide down.
3. Attach Winch block to easel. Start the 5 wood screws on pulley box, position over pre-drilled holes on Base of easel and secure to easel by tightening screws.
4. To put handle on, take large nut off, put handle on and tighten nut.
5. Bottom Painting Tray - loosen large knobs. Attach to easel by sliding down Easel Frame then tighten black knobs. Put in utility tray and tighten small black knobs on sides. Complete by putting in canisters. **NOTE: Make sure large black knobs on painting tray are loosened before trying to turn the Winch handle.**
6. Loosen the Wedge-lok System on Middle Painting Tray, slide onto Mast Channel and tighten knob at desired height. Loosen black knobs on Top Canvas Holders, slide down Masts and tighten black knobs.
7. To install Pulley System, please see diagram at left. **NOTE: To install pulley system, the Bottom Painting Tray must be in its lowest position (to the floor) to give the maximum movement.**